



## BASIC USAGE

- 1- Plug PowerLINK into radio via the on-board LAN port
- 2- Turn device to Router Mode "R"
- 3- Wait a few moments for hotspot to be enabled
- 4- Connect phone / laptop / router to the broadcasting channel of the PowerLINK device ("www.LinkTechs.net" by default)
- 5- You'll now be connected to the radios' network

- 1- Download and install [WinSCP](#) (all basic install settings are acceptable)
- 2- Set the PowerLINK to Router Mode "R"
- 3- Connect to the PowerLINK via wired or wireless connection ([www.linktechs.net](#))
- 4- Set a static IP Address of your interface to **192.168.1.70**
- 5- Open WinSCP
- 6- Set File protocol to SCP
- 7- Set Host Name to "192.168.1.69"
- 8- Set User name to "root"
- 9- Set Password to "gevaach"

## ADVANCED CONFIGURATION



Once the connection is made a warning will appear to accept the connection

You can then open the "etc" folder then the "config" folder and locate the [wireless config](#) file to modify wireless settings.

If connecting to the PowerLINK wirelessly:

Be sure to make the [SSID](#) change last, as this will disconnect you from the device.